

#220D English Garden Chair Poly



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		8 1 1/2" Screws
B		16 2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, lay the seat/back combo on a flat surface, place the seat into place following the markings on the legs. (Illustration 2)
3. Fasten the seat to the legs, using 2 (B) 2" Screws. Repeat on the other side. (Illustration 3)
4. To attach the side braces, line the brace up with the markings on the legs and fasten using 2 (B) 2" Screws. Repeat on the other brace. (Illustration 4)
5. Then place the front legs into place, fasten on the seat and on the brace using 2 (B) 2" Screws on each. Repeat on the other side. (Illustration 5)
6. To fasten the center brace, begin by turning the chair upside down. Line the brace up with the markings and fasten using 2 (A) 1 1/2" Screws. Repeat on the other side of the brace. (Illustration 6)
7. Turn the chair right side up, and fasten the front slat of the seat using 2 (A) 1 1/2" Screws on both sides. (Illustration 7)

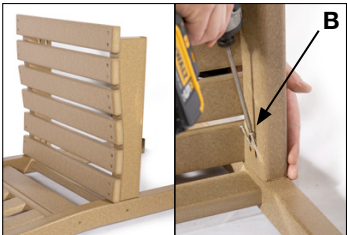


Illustration 2

Illustration 3

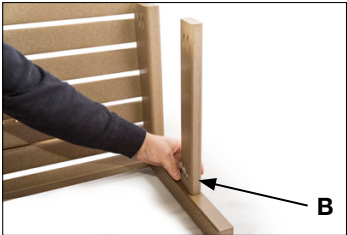


Illustration 4



Illustration 5

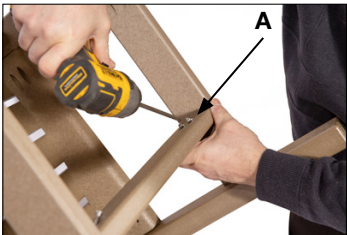


Illustration 6



Illustration 7