BALCONY & PUB
ASSEMBLY INSTRUCTIONS

#322D Bistro Settee



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16” Socket

Included Hardware

A		4	1½” Screws

Instructions:

1. Use instructions from #321Bistro Chair to assemble chairs.
2. With the two chairs setting upright, line up the table with the arms. Keep point flush with the round part of the arm rest. Fasten using 2 (A) 1½” Screws. (Illustration 1)
3. Fasten the back of the table to the arms using 2 (A) 1½” Screws. (Illustration 2)



Illustration 1

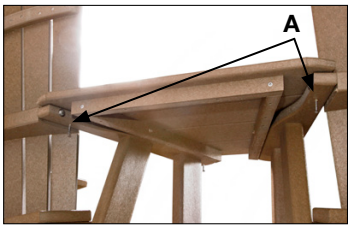


Illustration 2