FANBACK SERIES

ASSEMBLY INSTRUCTIONS


# #341 Fan Back Swing Poly



## Tools Required


- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16” Socket or 7/16 wrench

## Included Hardware

| | | | |
|---|---|---|---|
| **A** |  | 2 | ¼” x 3½” Lag Bolt |
| **B** |  | 6 | 2” Screws |
| **C** |  | 2 | 5” Eye Bolt |
| **D** |  | 2 | 3/8” Nut |

## Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. Set the back into the seat. Hold flush to seat. Fasten using 6 (B) 2” Screws. (Illustration 2)
3. Then fasten the arm/leg combo to the seat and back. Fasten the arm using 1 (A) ¼” x 3½” Lag Bolt. Then fasten the leg using 1 (C) 5” Eye Bolt & 1 (D) 3/8” Nut. (Illustration 3) Repeat on the other side.

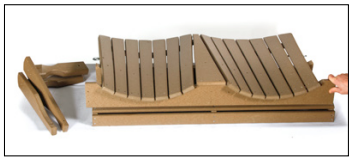

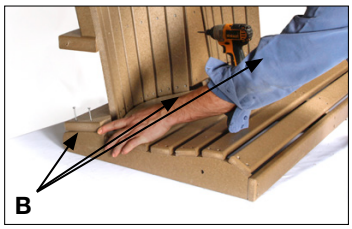



Illustration 2




Illustration 3