FANBACK SERIES

ASSEMBLY INSTRUCTIONS

# #365 Fanback Rocker



## Tools Required


- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16” Socket or 7/16" Wrench

## Included Hardware

| | | | |
|---|---|---|---|
| **A** |  | 4 | ¼” x 3” Carriage Bolt |
| **B** |  | 4 | ¼” Nut |
| **C** |  | 2 | ¼” x 3½” Lag Bolt |
| **D** |  | 12 | 2" Screws |

## Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, line up the back and pull the back tight to the seat slat. (Illustration 2)
3. With a #2 Square Head Bit, insert 2 (D) 2" screws into the pre-drilled holes and fasten to the bottom back board. Repeat on the other side. (Illustration 2)
4. Fasten the arm & leg combo to the seat using 2 (A) ¼” x 3” Carriage Bolts & 2 (B) ¼” Nuts. Do not tighten the nuts till complete. Repeat on other side. (Illustrations 3 & 4)
5. Fasten the arm & leg combo to the back using 1 (C) ¼” x 3½” Lag Bolt. Repeat on the other side. (Illustration 5)
6. Turn the chair upside down with the arms down. Fasten the rocker runners with 8 (D) 2” screws. (Illustrations 6 & 7)

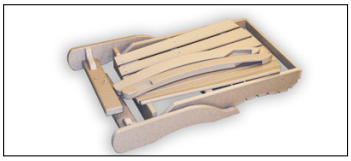

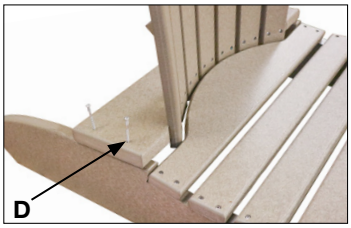



Illustration 2

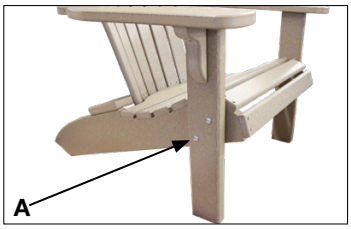



Illustration 3

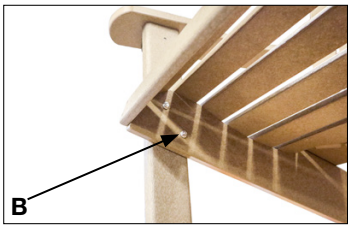



Illustration 4

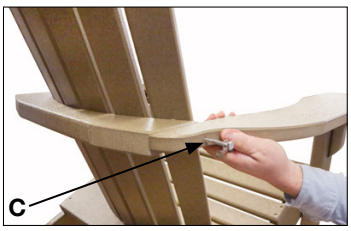



Illustration 5




Illustration 7

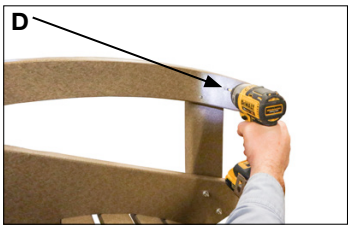



Illustration 6