


ADIRONDACK BARSTOOL



ASSEMBLY MANUAL

Parts List

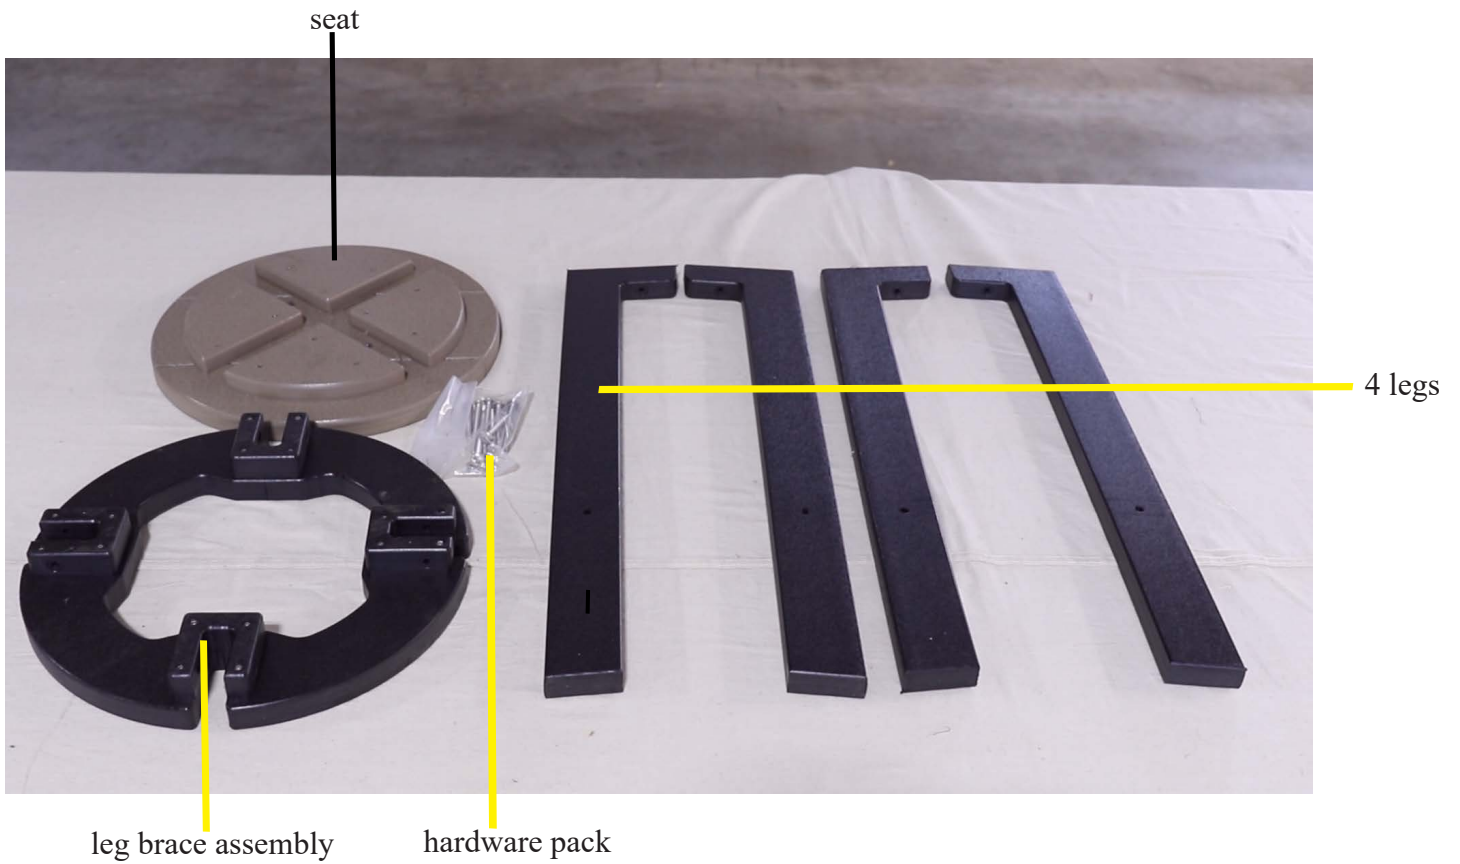

Tools Required For The Job (Included)



5/32" Hex Key

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1




Begin by placing the seat upside down on a clean, smooth surface. Then fasten one of the four legs to the seat using 2" bolts. Only finger tighten at this point.

Step:2



Fasten second leg to seat across from first leg installed.

Step:3

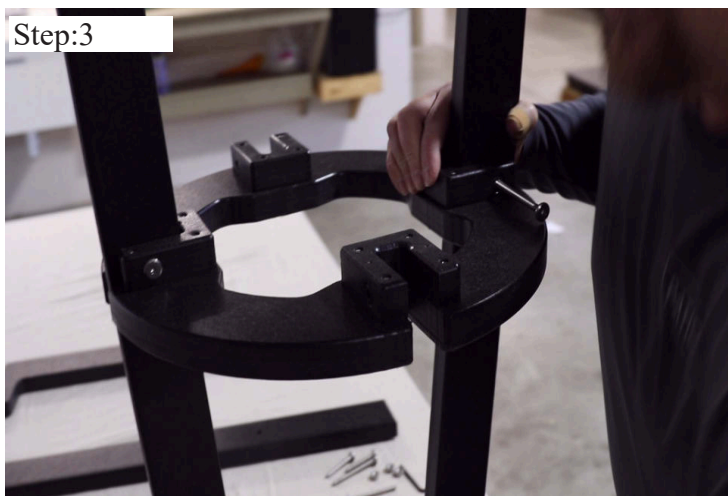

Install leg brace assembly using 2 3/4" bolts.

Step:4



Finger tighten nuts.

Step:5



Install third and fourth legs.

Step:6



Fasten these legs to leg brace assembly first.

Step:7



Then fasten these legs to the seat.
Tighten all nuts and bolts at this time.

Step:8



Your barstool assembly is now complete and should appear like this.