Adirondack Dining Chair

ASSEMBLY MANUAL




Thank you for choosing Patiova Furniture and congratulations on purchasing a sustainable, premium outdoor living product!

We are excited for the great moments and memories you'll create while enjoying your new Patiova furniture.

Now, let's get started on assembly! This manual is designed to make the process simple, with step-by-step instructions and helpful pictures to guide you along the way.

We're confident you'll find the assembly smooth and hassle-free.


Parts List

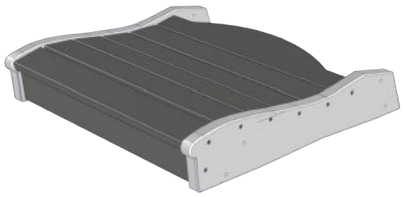

Seat Assembly




Back Assembly

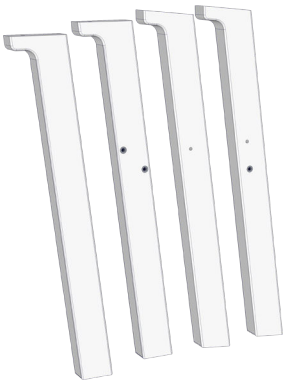

Legs



Arm Rests

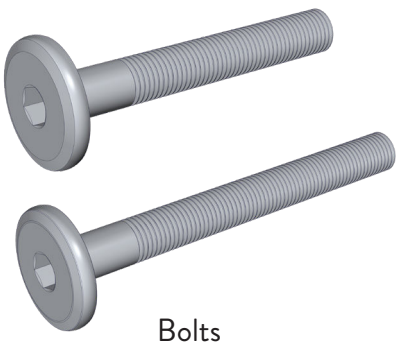


Bolts

Description	QTY
Seat Assembly	1
Back Assembly	1
Arm Rest	2
Front Legs	2
Back Legs	2
1.5" Bolts	10
2" Bolts	2
3" Bolts	2




Step 1.
Start the assembly with the seat, a front leg and a back leg.

There is a left and right leg, make sure you are using the correct one for that side.

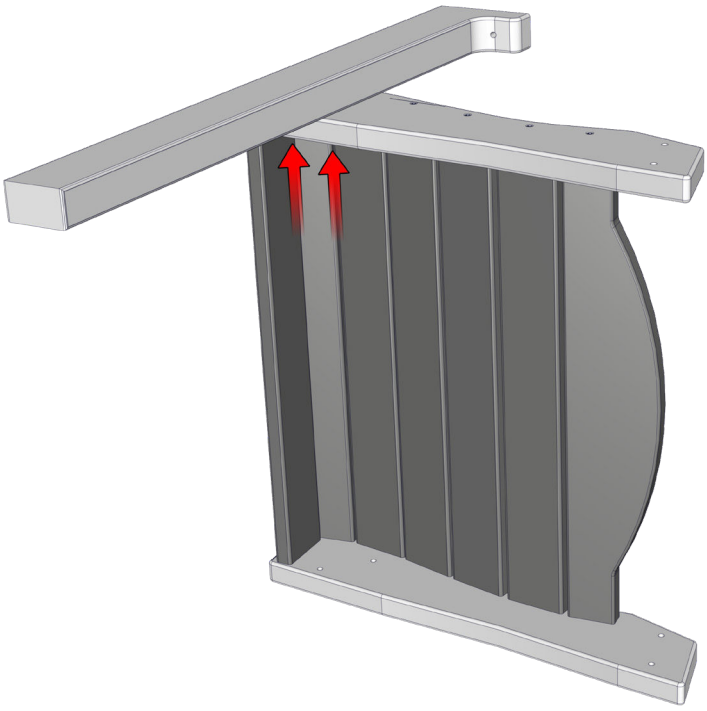


Step 2.
The front leg has two insert nuts installed, place the leg towards the front of the seat and align the insert nuts with the pre-drilled hole in the seat.

Fasten the leg to the seat assembly using two 1 ½" bolts. Only hand tighten all bolts for now.

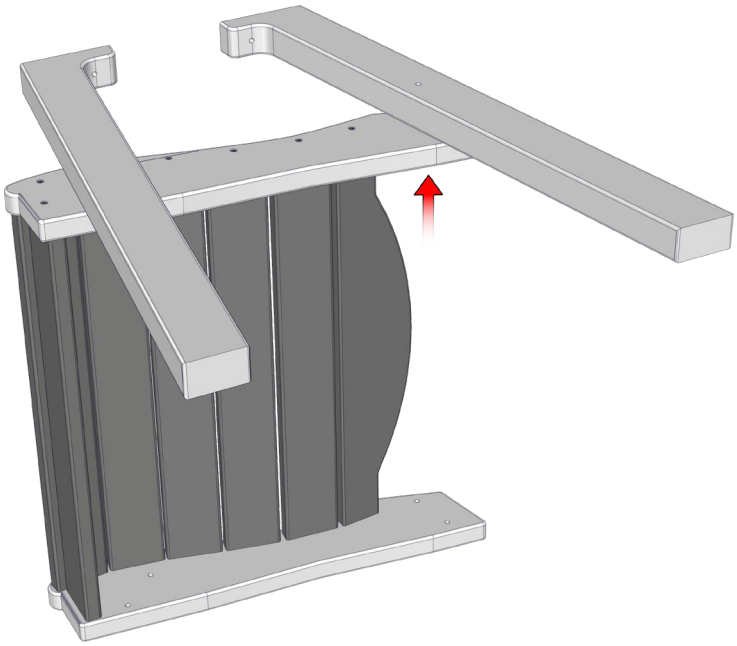

Step 3.
The back leg has one insert nut and one through hole.

Align the holes then fasten the leg using one 1 ½" bolt through the seat into the insert nut in the leg.

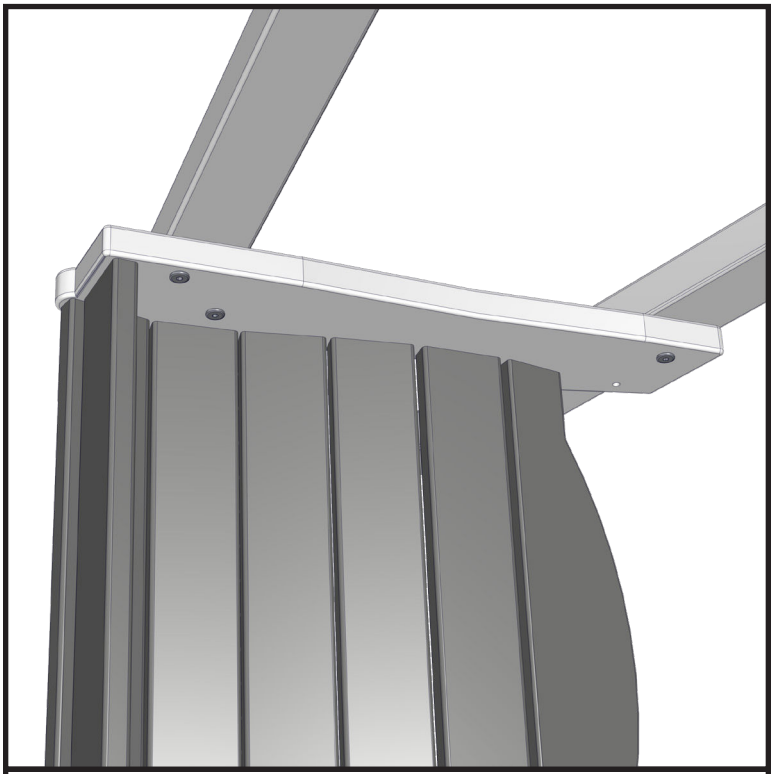

Step 4.
The underside of the seat should look like this.




Step 5.
Repeat the previous steps to install the legs on the other side.
Set the seat assembly upright when the legs are finished.



Step 6.
Place the arm rests on the legs and align the pre-drilled holes.

The arm rests have insert nuts installed, these need to be facing down.

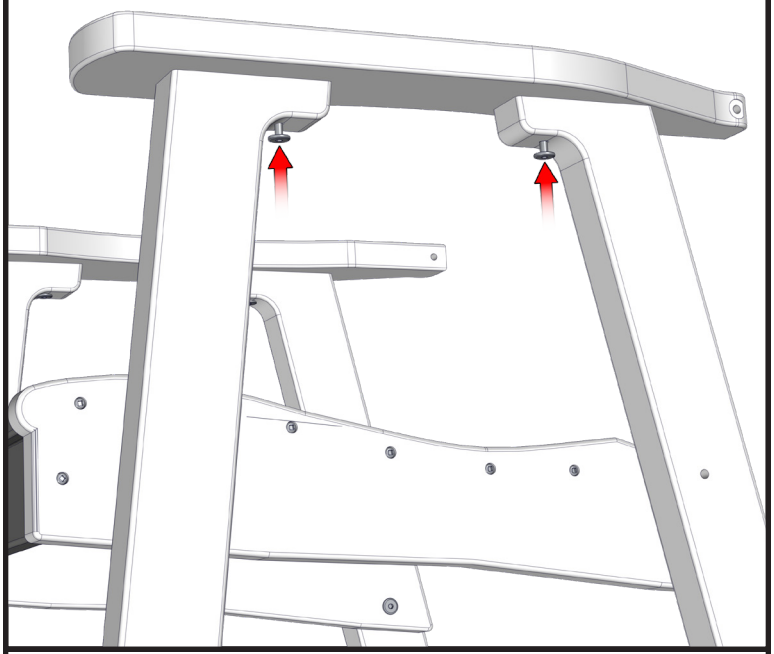

Step 7.
Fasten the arm rests to the legs using 1 ½" bolts.


Tighten all the bolts on the chair at this point.



Step 8.
Place a 3" bolt in both through holes in the legs to prepare for the back.
Place these bolts flush with the inside of the seat for now.



Step 9.
Place the back in position and tighten the 3" bolts to hold it in place.

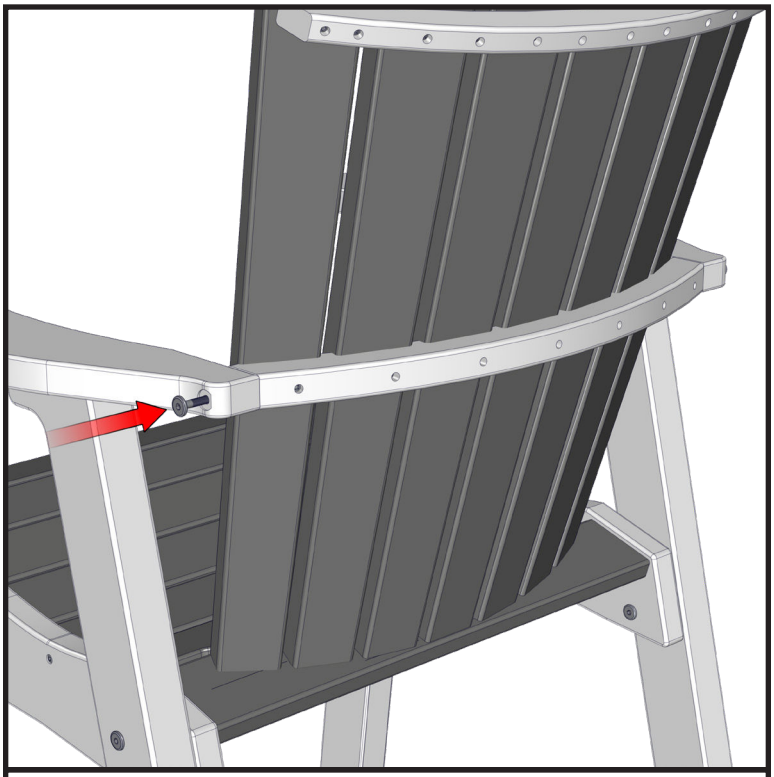

Step 10.
Fasten the arm rests to the back using 2" bolts to finish the chair assembly.



