POLY ADIRONDACK SWING



ASSEMBLY MANUAL

Parts List



Tools Required For The Job



5/32” Hex Key
(included)

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.



1/2" wrench
(not included)

Step:1




Begin by placing the seat assembly in this position on a clean, smooth surface.

Step:2



Fasten one front leg and one back leg to seat assembly using one 1 1/2" bolt through pre-drilled holes. Fasten from the bottom up. Finger tighten only.
Repeat on opposite side.

Step:3

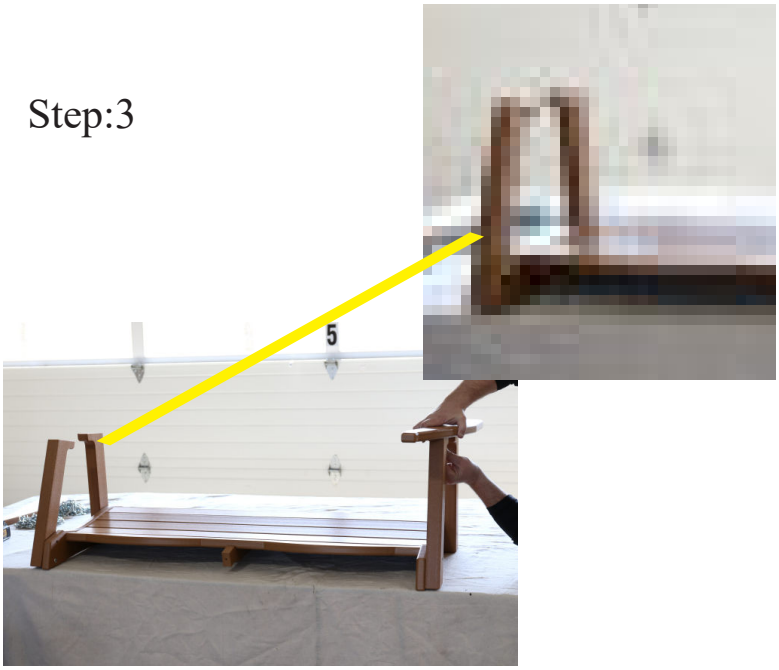

Notice the configuration of the legs.

Step:4




Notice the holes not used in step 3.

Step:5



Fasten armrest to legs using 1 1/2" bolts.
Tighten now.
Repeat on opposite end.

Step:6

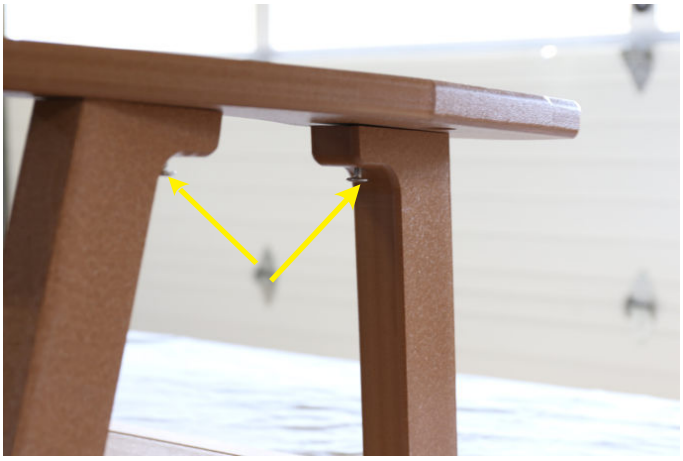

Close up view of bolts on step 5.

Step:7



Assembly should look like this so far.

Step:8



You are now ready to install the back assembly.

Step:9



Begin by fastening back leg to back assembly using 3" bolt.
Tighten now.
Repeat on opposite side.

Step:10



Fasten link of chain hanging from the bag to back assembly. Place washer on 2 1/2" bolt, then place through link, then through pre-drilled hole on armrest and into pilot hole on back. Tighten immediately. Do not overtighten.

Step:11




Repeat on opposite side.

Step:12



Place washer on eye bolt then thread through pre-drilled hole on front leg.

Step:13

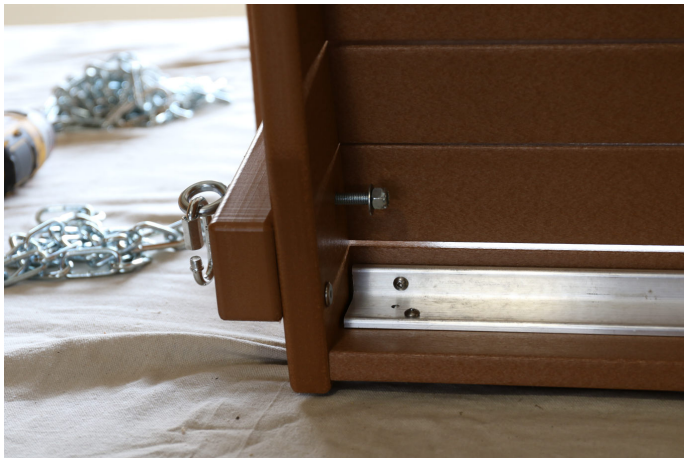


Place washer on inside then fasten with lock nut. Tighten immediately. Then repeat on opposite side.
Tighten all bolts on legs at this time.

Step:14



Remove chain from pack then place link through hole in armrest, then fasten one end to eye bolt using quick link. Notice location of snap link.
Repeat on opposite side.

Step:15

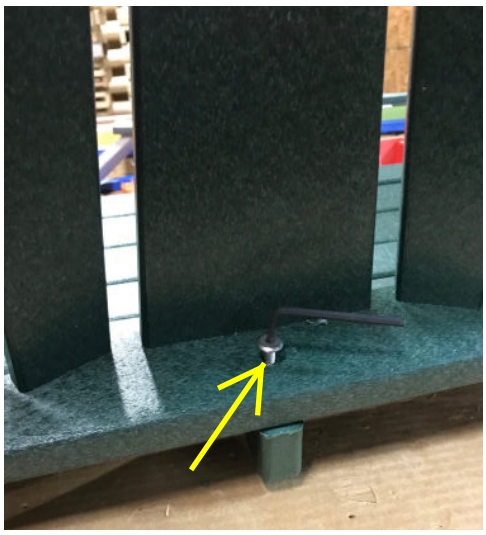

Fasten center of back assembly to center of seat assembly using 2 1/2" bolt.

Step:16



Congratulations! Your assembly is now complete. Your love seat should appear like this when complete.