Adirondack Value Chair Assembly Instructions



2024 v2.1

Thank you for choosing Patiova!

Congratulations on selecting a sustainable, premium outdoor living product. We're thrilled for the wonderful moments you'll enjoy with your new Patiova furniture.

Let's get started with assembly!
This manual provides clear, step-by-step instructions and helpful images to ensure an easy setup.
We're confident your assembly experience will be smooth and enjoyable.

Generational Plus Warranty

A testament to our confidence in the durability and quality of our products.
This 20-year warranty for residential use and (a 5-year warranty for commercial use) covers the premium poly material and the marine-grade hardware beyond what most other brands can offer.

Need Help?

Questions about assembly or missing parts? Please contact the retailer you purchased from.

Cleaning Tips

General Cleaning
Scrub with soap and water solution using a soft sponge or plastic-bristled brush. You can use a soft-bristled toothbrush to clean spaces that are hard to reach.

Deep Cleaning
A pressure washer can be used on the lightest setting to deep clean your furniture. It is not recommended to use more than 1,500psi. Keep the tip of the pressure washer at least 10-12 inches away from the furniture so it does not damage the lumber.

Reduce Waste

Made from post consumer and post industrial recycled material, our products meet criteria for the USGBC LEED requirements. In addition, we also use environmentally-friendly processes that produce minimal greenhouse gases. When you buy , know you're also building a stronger planet.

Color Stable

Rich colors stay brilliant thanks to built-in UV protection.


Be Informed

Join our mailing list to get the latest on outdoor furniture trends, exclusive offers, and updates on new products, straight from our design team to your inbox!

PARTS




Seat
Assembly x1

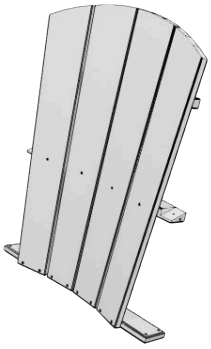


Back
Assembly x1



Arm Rests x2

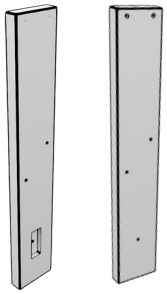

Legs x2

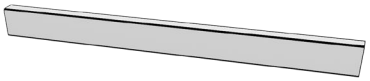


Leg Support x 1


HARDWARE




Flange Nut x 4

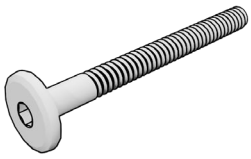


2.1/4” Bolt x4

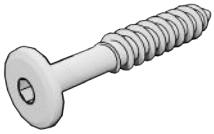


2” Lag x4

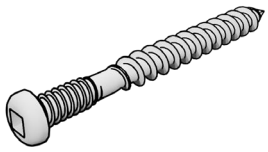


2” Polly Screw x4

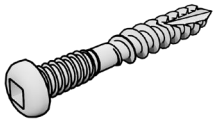

1.1/2” Polly Screw x6

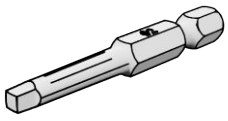

#2 Square Drive Bit

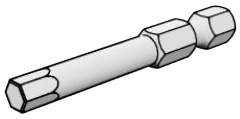


5/37 Hex Drive Bit

TOOLS REQUIRED


- Impact Driver or Drill
- 7/16” Socket or Wrench

1

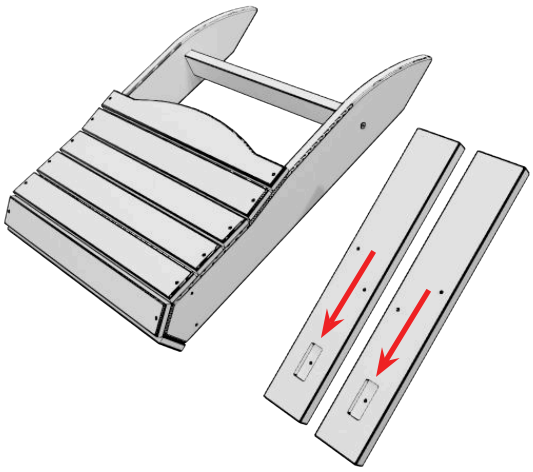


- Locate the Seat Assembly and (2) Legs.
- Place on a clean and flat area to begin assembly.
- **Note**: Each leg has a pocket on the lower end. (See Above)

2

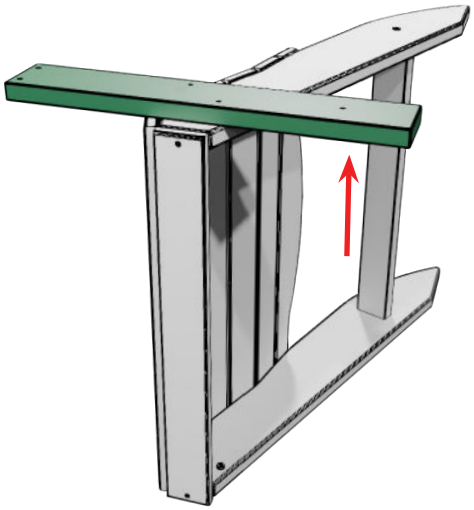

- Place the Seat Assembly on one side.
- Locate and position Leg on side of Seat Assembly as shown above. Align Holes and position pocket noted in previous step is on the inside shown by arrow above.

3

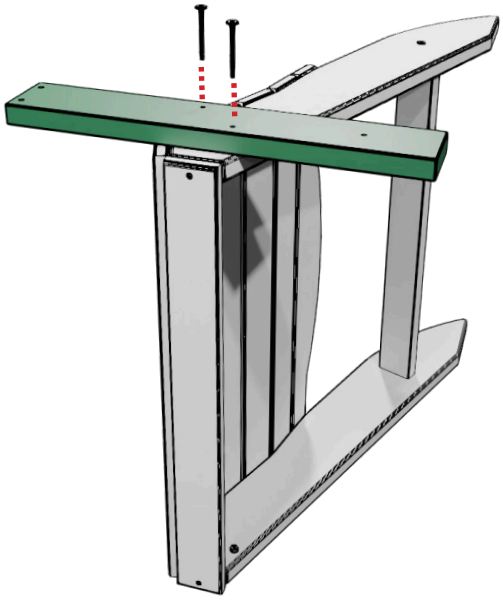


- Insert (2) 2.1/4” Bolts through the holes shown above.

4




- Fasten Bolts with (2) Flange Nuts on the inside of the seat using 7/16” socket or wrench and the provided 5/37 Hex Drive Bit.

5

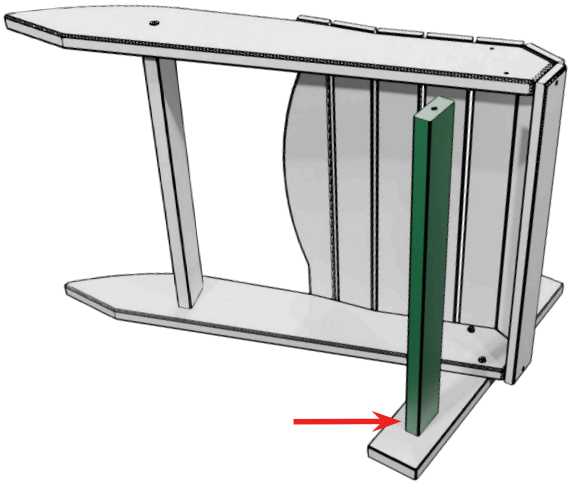


- Turn Chair over.
- Place the Leg Support in the pocket on the Leg and press tight into pocket.

6

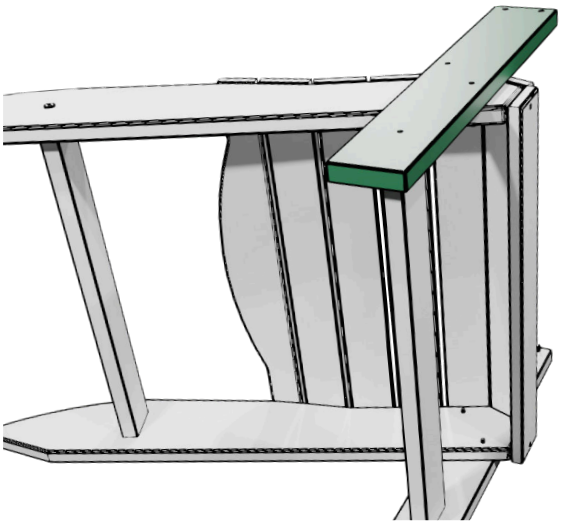


- Place opposite Leg on top of Seat and align the holes.
- Press Leg Support into the pocket on the underside of the Leg.

7

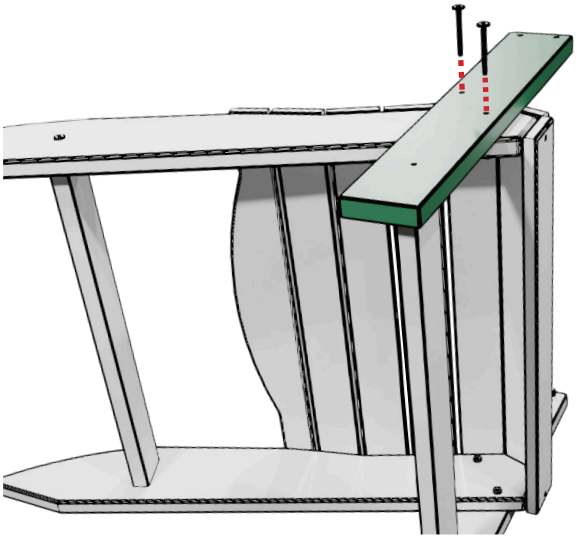


- Fasten Leg to the Seat using (2) 2.1/4” Bolts and (2) Flange Nuts as shown in previous steps.

8

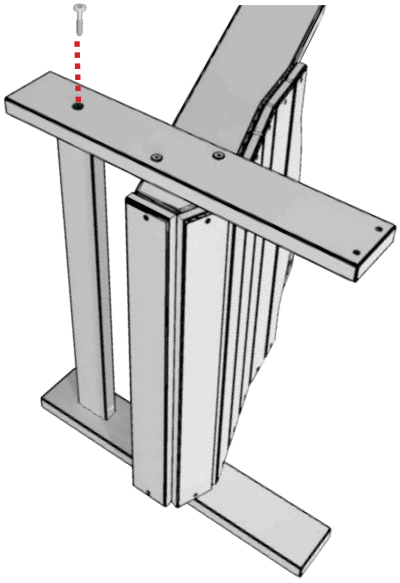


- Fasten Leg to Leg Support using (1) 2” Lag and provided 5/37 Hex Drive Bit.

9

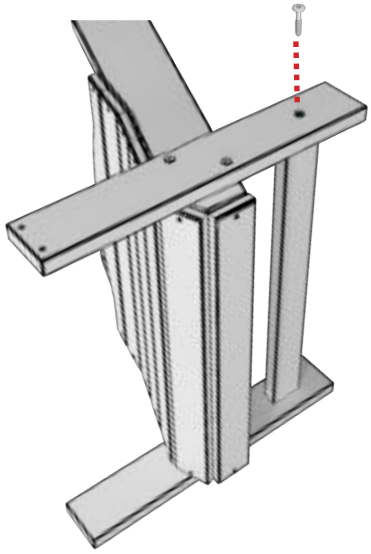


- Flip Chair over and fasten opposite side Leg to Leg Support using (1) 2” Lag and provided 5/37 Hex Drive Bit.

10

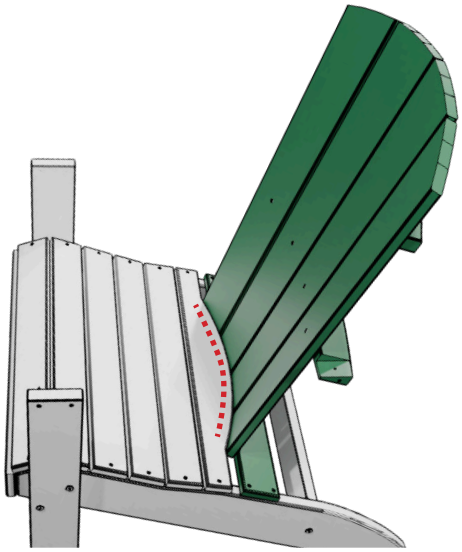


- Locate and Place the Back Assembly in position as shown above.
- Push the Back Assembly tight against the Seat Assembly shown with curved dotted line above.

11

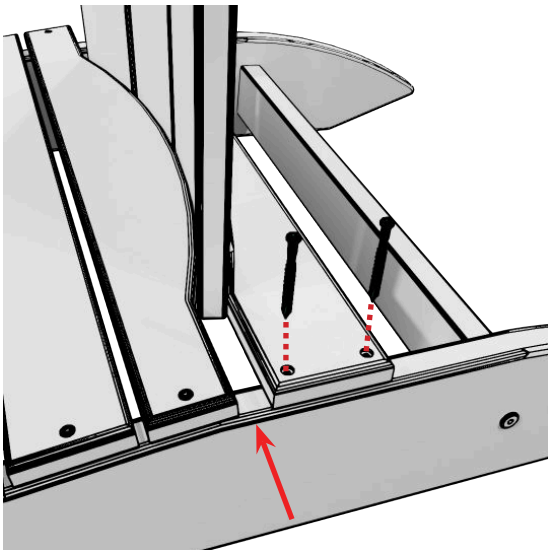

- Note Arrow Above and ensure spacing is equal on both sides.
- Fasten Back Assembly to Seat Assembly using (2) 2” Poly Screws and #2 Square Drive Bit provided through the pre drilled holes.

12

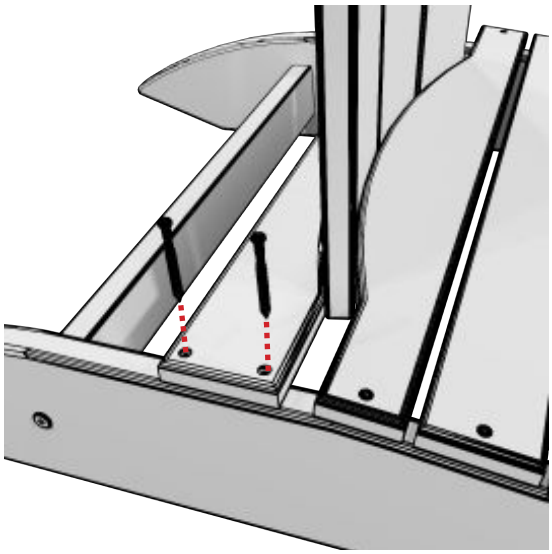


- Fasten Opposite Side following previous step.

13




- Locate the Arm Rests and Place in position as show above.
- See next three step for proper alignment.

14

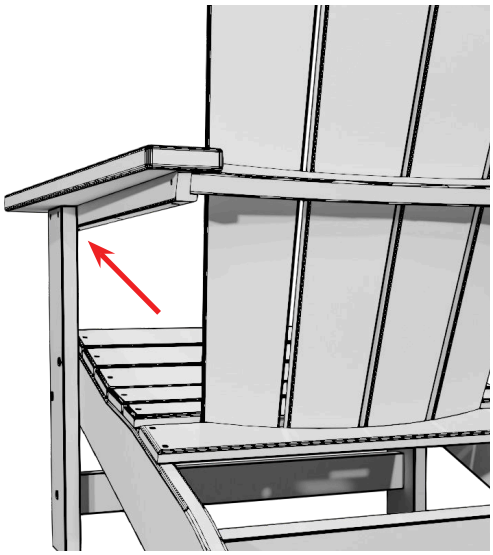


- Arm Rest goes on the inside of Leg.

15

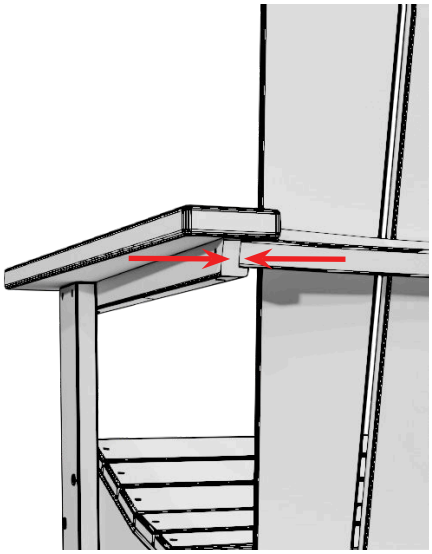


- Slide rear of Arm Rest groove into Back Assembly and ensure boards evenly aligned in rear.

16

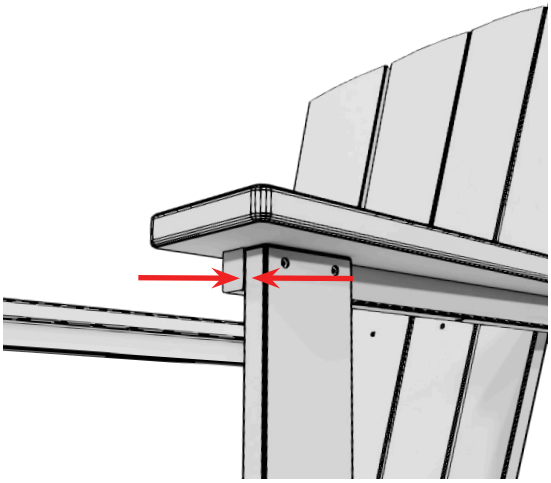


- Align Leg and Arm Rest flush as shown above.

17

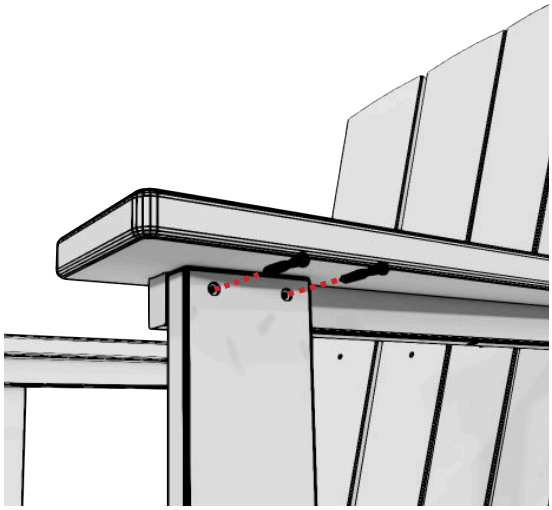


- After ensuring proper alignment.
- Fasten the Leg to the Arm Rest using (2) 1.1/2” Poly Screws and the #2 Square Drive Bit.
- Repeat for other arm.

18

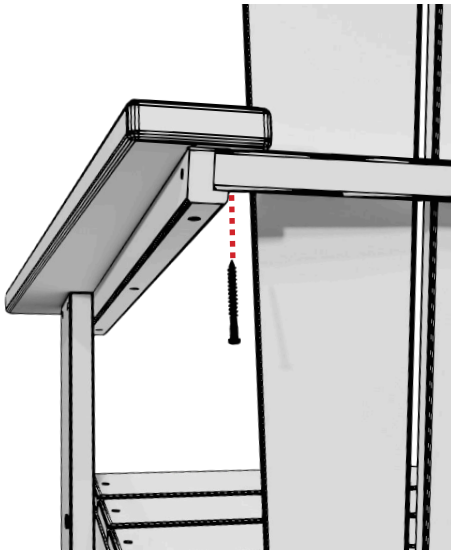

- Double checking alignment again.
- Fasten the Arm Rest to the Back Assembly using (1) 1.1/2” Poly Screws and the #2 Square Drive Bit.
- Repeat for other arm.

19

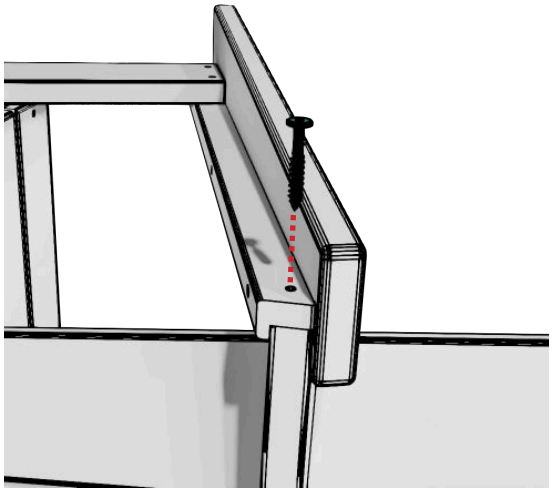

- Place Chair on one side.
- Drive (1) 2” Lags through the pre drilled hole shown above and attach Arm Rest to Back Assembly.
- Flip chair over to other side and attach Arm Rest to Back Assembly on opposite side.

20



- Enjoy your Adirondack.